





CHAIN CAGE INSTALLATION

BEFORE YOU START - HAS YOUR CHAIN CAGE GOT THE CORRECT SIZE HINGED CLAMPS [A] TO FIT YOUR SEAT TUBE ?
(28.6, 31.8, 34.9)

YOU WILL NEED THE FOLLOWING TOOLS; 8MM SPANNER, 3MM AND 4MM ALLEN KEY.

1. FIRST ATTACH THE HINGED CLAMPS [A], TO THE BACK PLATE [B], THE LONGER SPACER [C] GOES ON TOP.
2. REMOVE THE LONGEST SPACER AND BOLT [D] FROM THE CAGE, NOW PLACE THE CAGE OVER THE CHAIN/CHAINWHEEL.
3. FIT THE CLAMPS AROUND THE SEAT TUBE AND INSERT THE BOLTS - DO NOT FULLY TIGHTEN YET.
4. FIT THE LONGEST SPACER AND BOLT [D] BACK INTO THE CHAIN CAGE BELOW THE CHAIN, PUT THE BIKE IN FIRST GEAR.
5. ALIGN THE CHAIN CAGE WITH THE CHAIN SO THAT IT JUST CLEARS THE BACK PLATE [B], AT THE SAME TIME ADJUST THE HEIGHT SO THAT THE PLASTIC RUNNERS [E] JUST CLEAR THE TOP OF THE CHAIN, NOW TIGHTEN UP THE HINGED CLAMPS [A].

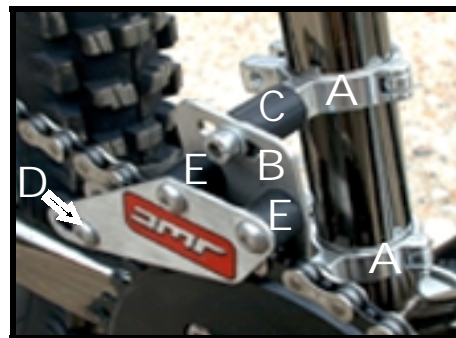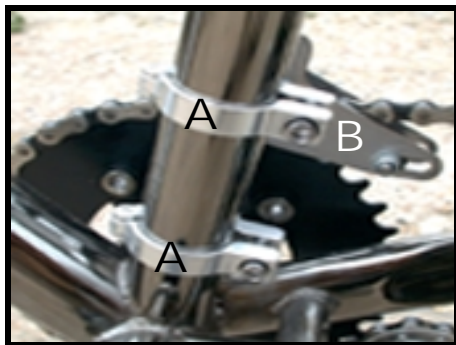

FOR FURTHER INFORMATION AND PICTURES, CHECK OUR WEBSITE - www.dmr bikes.com





CHAIN CAGE INSTALLATION

BEFORE YOU START - HAS YOUR CHAIN CAGE GOT THE CORRECT SIZE HINGED CLAMPS [A] TO FIT YOUR SEAT TUBE ?
(28.6, 31.8, 34.9)

YOU WILL NEED THE FOLLOWING TOOLS; 8MM SPANNER, 3MM AND 4MM ALLEN KEY.

1. FIRST ATTACH THE HINGED CLAMPS [A], TO THE BACK PLATE [B], THE LONGER SPACER [C] GOES ON TOP.
2. REMOVE THE LONGEST SPACER AND BOLT [D] FROM THE CAGE, NOW PLACE THE CAGE OVER THE CHAIN/CHAINWHEEL.
3. FIT THE CLAMPS AROUND THE SEAT TUBE AND INSERT THE BOLTS - DO NOT FULLY TIGHTEN YET.
4. FIT THE LONGEST SPACER AND BOLT [D] BACK INTO THE CHAIN CAGE BELOW THE CHAIN, PUT THE BIKE IN FIRST GEAR.
5. ALIGN THE CHAIN CAGE WITH THE CHAIN SO THAT IT JUST CLEARS THE BACK PLATE [B], AT THE SAME TIME ADJUST THE HEIGHT SO THAT THE PLASTIC RUNNERS [E] JUST CLEAR THE TOP OF THE CHAIN, NOW TIGHTEN UP THE HINGED CLAMPS [A].

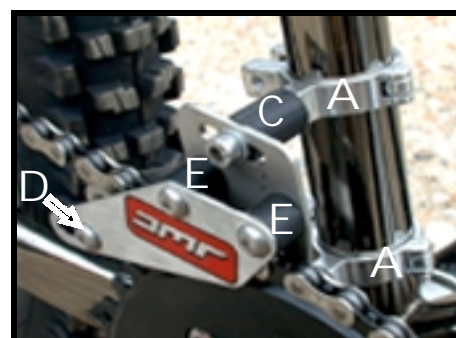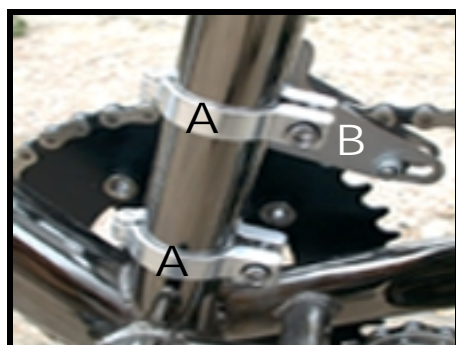

FOR FURTHER INFORMATION AND PICTURES, CHECK OUR WEBSITE - www.dmr bikes.com