


# 2006 SRS CORRECT SETUP

Top slider positioned at 12-O-Clock

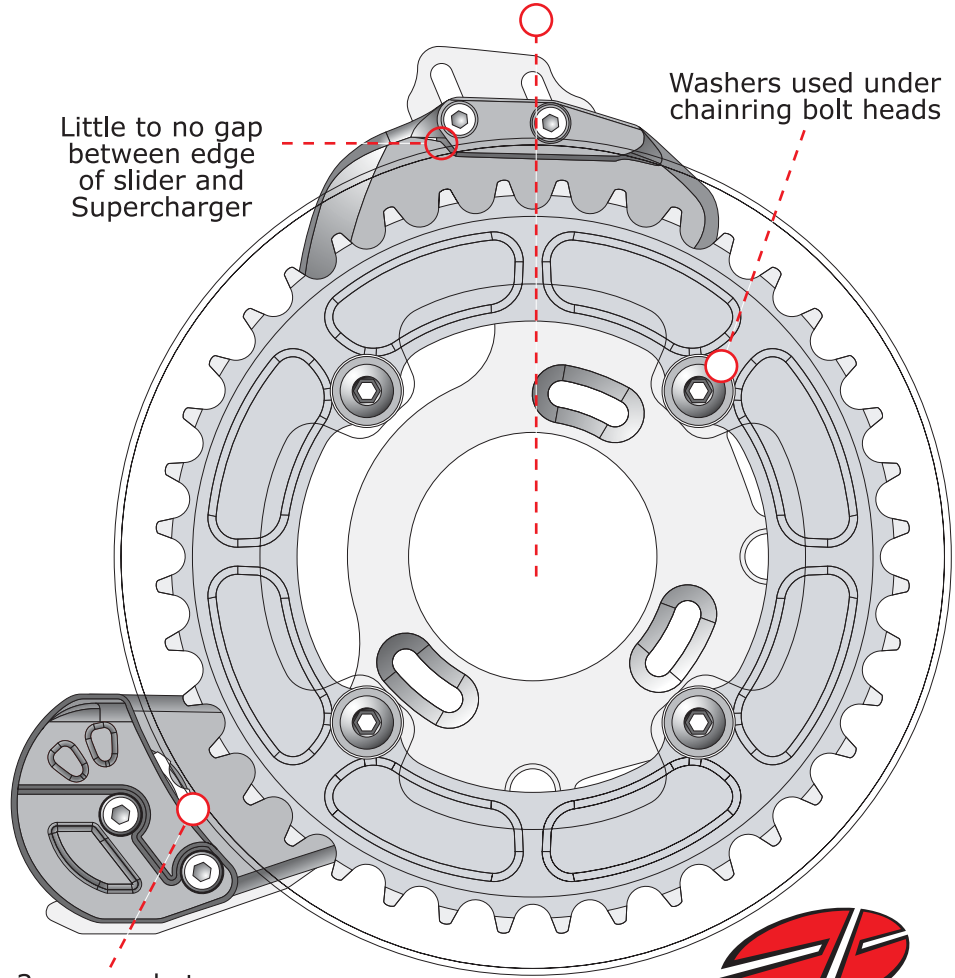

Little to no gap between edge of slider and Supercharger

Washers used under chainring bolt heads

3mm gap between lower slider and Supercharger



**e.thirteen**

BB SHELL WIDTH	CHAINLINE	TYPICAL BB SPINDLE LENGTH	TYPICAL # OF SPACER WASHERS NEEDED	
			BLACK (2.5mm)	GOLD (1.25mm)
68	47.5	113	0	FINE TUNE
68 or 73	50	113	0	FINE TUNE
68 or 73	52.5	118	1	FINE TUNE
68 or 73	55	123	2	FINE TUNE
68 or 73	57.5	128	3	FINE TUNE
83	57.5	128	1	FINE TUNE
83	60	133	2	FINE TUNE
100	63.5	140	0	FINE TUNE
100	65	145	1	FINE TUNE